

Universal AC/DC Photoelectric Sensors



BX Series PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Built-in sensitivity adjuster
- Timer function (built-in timer model)
 - ON Delay, OFF Delay, One-shot Delay
- NPN/PNP open collector simultaneous output (DC power Type)
- Self-diagnosis function (green lights up in the stable level)
- Built-in reverse power protection circuit and output short overcurrent protection circuit
- Wide power supply range: Universal 24-240 VDC $\equiv$ / 24-240 VAC $\sim$
- IP65 protection rating (IEC standard)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in electric shock or fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in electric shock or fire.
- 05. Check 'Connections' before wiring.**
Failure to follow this instruction may result in electric shock or fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in electric shock or fire.
- 03. Do not use a load over the range of rated relay specification.**
Failure to follow this instruction may result in insulation failure, contact melt, contact failure, relay broken, or fire

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
When using a separate power supply for the sensor and load, supply power to the sensor first.
- The power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category II

Product Components

Sensing type	Through-beam	Retroreflective	Polarized retroreflective	Diffuse reflective
Product components	Product, instruction manual			
Reflector	-	MS-2	MS-3	-
Adjustment screwdriver	× 1	× 1	× 1	× 1
Bracket / Z bolt	× 2	× 1	× 1	× 1
Washer	× 2	× 1	× 1	× 1
Bolt / nut	× 4	× 2	× 2	× 2
Ø 6 / Ø 10 waterproof rubber	× 2	× 1	× 1	× 1

Ordering Information

This is only for reference, the actual product does not support all combinations.
For selecting the specified model, follow the Autonics website.

BX **1** - **2** **3** - **4**

① Sensing distance

Number: Sensing distance (unit: mm)
Number+M: Sensing distance (unit: m)

② Sensing type

T: Through-beam
M: Retroreflective
P: Polarized retroreflective
D: Diffuse reflective

③ Output method

FR: AC/DC power, relay contact output
DT: DC power, solid state (transistor) output

④ Function


No mark: No function
T: Built-in timer function

Sold Separately

- Reflector: MS Series
- Retroreflective tape: MST Series

Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
 - Installation environment and background (reflected light)
 - Sensing distance and sensing target
 - Direction of target's movement
 - Characteristic curves
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Retroreflective: If the sensing target has a glossy surface or high reflection, tilt the sensing target with an angle from 30 to 45 degrees and install the sensor.

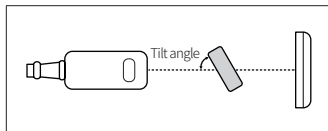


- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

Through-beam	Retroreflective	Reflective
Emitter - Receiver: Install to face each other	Sensor - Reflector: At least 0.1 m apart, install to face each other (parallel with the sensing side of the unit)	Sensor - Sensing target: Install to face each other (parallel with the sensing side of the unit)

Cautions for Wiring


- Use the round wire with the size of $\varnothing 6$ to 10 mm like [Fig. 1].
- When extending the wire, use a wire of AWG 20 or higher. (extension length: ≤ 100 m)
- Use the wire holder, washer, and waterproof rubber together like [Fig. 2].
Select the round wire with the size of $\varnothing 6$ to 10 mm for the waterproof and tighten the cable holder by a torque of 1.0 to 1.5 N m.
- Be sure to mount the protective cover. Failure to follow this instruction may result in electric shock. Tighten the screw of protective cover by a torque of 0.3 to 0.5 N m.
- Use the UL approved stripped crimp terminal that satisfies the size of [Fig. 3].
- Tighten the terminal screw with a torque of 0.8 N m.

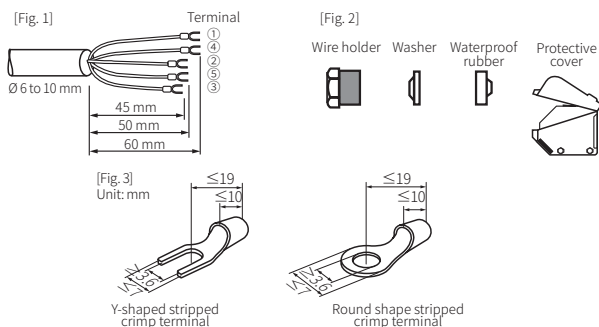


Connections

■ AC/DC power, relay contact output

- Emitter




- Receiver, Retroreflective, Polarized retroreflective, Diffuse reflective type

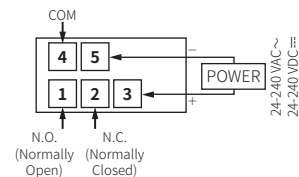


■ DC power, solid state (transistor) output

- Emitter




- Receiver, Retroreflective, Polarized retroreflective, Diffuse reflective type

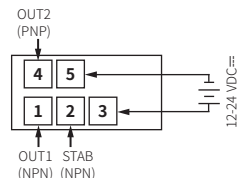


Circuit

■ AC/DC power, relay contact output

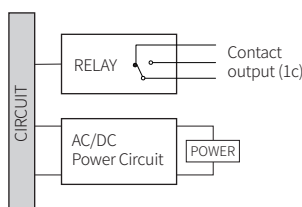


■ DC power, solid state (transistor) output

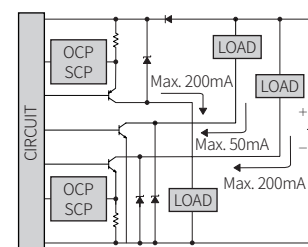

- OCP (over current protection), SCP (short circuit protection)
- If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

Operation Timing Chart and Indicators

■ Light ON mode

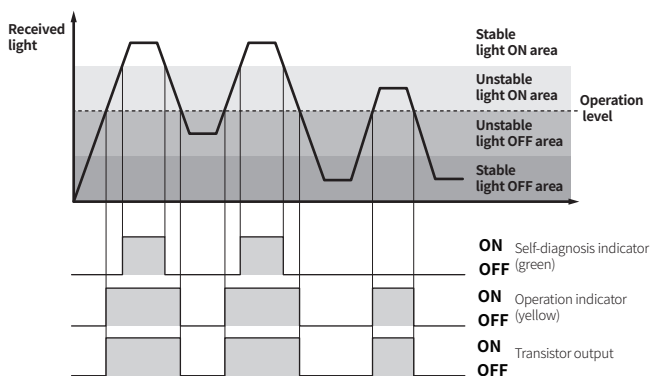

- For preventing the malfunction, the control output maintains off state for 0.5 sec after power-on.
- Timer mode: Timer OFF (SW1: ON, SW2: ON)
- In Dark ON mode, the waveforms are reversed.

Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.

STEP	Status	Description
01	Received	Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area.
02	Interrupted	Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B).
03	-	Set the adjuster at the mid position between (A) and (B) for optimal sensitivity.

Model	BX15M-T□-□	BX5M-M□-□	BX3M-P□-□	BX700-D□-□
Sensing type	Through-beam	Retroreflective	Polarized retroreflective	Diffuse reflective
Sensing distance	15 m	0.1 to 5 m ⁽¹⁾	0.1 to 3 m ⁽²⁾	700 mm ⁽³⁾
Sensing target	Opaque materials	Opaque materials	Opaque materials	Opaque, translucent materials
Min. sensing target	≥ Ø 15 mm	≥ Ø 60 mm	≥ Ø 60 mm	-
Hysteresis	-	-	-	≤ 20 % of sensing distance
Response time	AC/DC power, relay contact output model: ≤ 20 ms DC power, solid state (transistor) output model: ≤ 1 ms			
Light source	Infrared	Infrared	Red	Infrared
Peak emission wavelength	850 nm	940 nm	660 nm	940 nm
Sensitivity adjustment	YES (Adjuster)	YES (Adjuster)	YES (Adjuster)	YES (Adjuster)
Timer mode ⁽⁴⁾	OFF, ON Delay, OFF Delay, One Shot Delay mode selectable (Switch): 0.1 to 5 sec (Adjuster)			
Operation mode	Light ON mode - Dark ON mode selectable (Switch)			
Indicator	Operation indicator (yellow), self-diagnosis indicator (green), power indicator (yellow) ⁽⁵⁾			
Approval				
Unit weight	Based on the standard model, timer model: weight + 1 g			
AC/DC power	≈ 225 g	≈ 130 g	≈ 148 g	≈ 115 g
DC power	≈ 211 g	≈ 123 g	≈ 141 g	≈ 116 g

Output method	AC/DC power, relay contact output	DC power, Transistor solid state output
Power supply	24-240 VAC ~ ± 10 % 50/60 Hz 24-240 VDC ~ ± 10 % (ripple P-P: ≤ 10 %)	12-24 VDC ~ ± 10 % (ripple P-P: ≤ 10 %)
Power / current consumption	≤ 3 VA	It depends on the sensing type
Through-beam		Emitter: ≤ 50 mA, receiver: ≤ 50 mA
Reflective		≤ 50 mA
Control output	Relay contact output	NPN open collector - PNP open collector simultaneous output
Contact capacity	250 VAC ~ 3 A of resistance load, 30 VDC ~ 3 A of resistance load	-
Contact composition	1c	
Relay life cycle	Mechanical: ≥ 50,000,000 Electrical: ≥ 100,000	
Load voltage		
Load current	-	≤ 200 mA
Residual voltage		NPN: ≤ 1 VDC ~, PNP: ≤ 2.5 VDC ~
Self-diagnosis output	-	NPN open collector output ⁽¹⁾
Protection circuit	-	Reverse power protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC ~ megger)	
Insulation type	Double or strong insulation (dielectric voltage between the measured input and the power : 1.5 kV)	-
Noise immunity	± 1,000 VDC ~ the square wave noise (pulse width: 1 μs) by the noise simulator	± 240 VDC ~ the square wave noise (pulse width: 1 μs) by the noise simulator
Dielectric strength	Between the charging part and the case: 1,500 VAC ~ 50/60 Hz for 1 min	
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours	
Vibration (malfunction)	1.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 min	
Shock	500 m/s ² (≈ 50 G) in each X, Y, Z direction for 3 times	
Shock (malfunction)	100 m/s ² (≈ 10 G) in each X, Y, Z direction for 3 times	
Ambient illuminance (receiver)	Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx	
Ambient temperature	-20 to 55 °C, storage: -25 to 70 °C (no freezing or condensation)	
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)	
Protection rating	IP65 (IEC standard)	
Connection	Terminal type	
Material	Case, lens cover: PC, sensing part: Acrylic, bracket: SPCC, bolt: SCM, nut: SCM	


01) Load voltage: $\leq 30 \text{ VDC}$, load current: $\leq 50 \text{ mA}$, residual voltage: $\leq 1 \text{ VDC}$ (50 mA), $\leq 0.4 \text{ VDC}$ (16 mA)

The diagram shows the rear panel of the device with the following components labeled:

- 01**: Points to the four RJ45 Ethernet ports.
- 02**: Points to the "EXTEN-OUT" port.
- 03**: Points to the "STAB. OUT" port.
- 04**: Points to the rotary switch.
- 05**: Points to the "Antenna" connector.
- 06**: Points to the "GPS" connector.


- 01. Terminal (power, input/output)**
Refer to the 'Connections.'
- 02. Setting switch**
Select L.ON (Light ON) or D.ON (Dark ON) mode.
Built-in timer mode: Configure SW1 and SW2 for setting the timer mode.
- 03. Self-diagnosis indicator (green)**
- 04. Operation indicator (yellow)**
- 05. Sensitivity adjuster**
- 06. Timer adjuster**
(built-in timer model)

- Built-in timer model: Cong figure the timer switch (SW1 + SW2) for setting the timer mode.
- Use offered adjustment screwdriver for timer adjuster. (setting range: 0.1 to 5 sec)
Do NOT turn with excessive force to prevent product damage.
- During the operation of timer mode, conversion to other timer modes is applied after a former mode is finished.

Timer mode	Switch		Operation mode	Received Interrupted	
	SW1	SW2			
Timer OFF	ON	ON	Light ON	ON	
			Dark ON	ON	
One Shot Delay Mode	ON	OFF	Light ON	ON	
			Dark ON	ON	
ON Delay Mode	OFF	ON	Light ON	ON	
			Dark ON	ON	
OFF Delay Mode	OFF	OFF	Light ON	ON	
			Dark ON	ON	


- T: Time set by timer adjuster.

- Unit: mm, For the detailed drawings, follow the Autonics website.

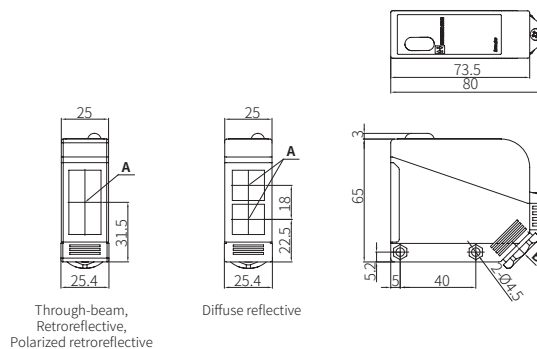

A	Optical axis	B	22 mm hexagonal nut
----------	--------------	----------	---------------------

■ Reflector (MS-3)

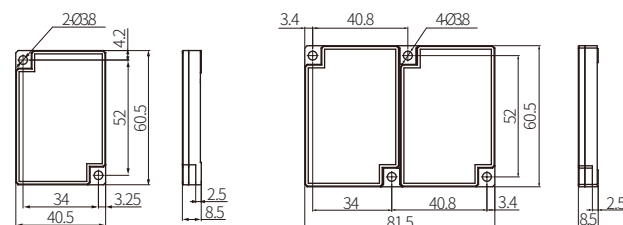

Technical drawing of a mechanical part with dimensions. The drawing shows a side view of a component with a total width of 46.5 and a total height of 20. The top edge has a 13mm wide section. The bottom edge has a 13mm wide section. The central section has a width of 16mm and a height of 8mm. The bottom section has a width of 24mm and a height of 8mm. The overall width of the bottom section is 50.5mm. The overall height of the bottom section is 20mm. The overall width of the top section is 46.5mm. The overall height of the top section is 20mm. The overall width of the component is 46.5mm. The overall height of the component is 20mm. The overall width of the component is 46.5mm. The overall height of the component is 20mm.


Sold Separately: Reflector MS Series

Appearance	Size (W × H)	Reflectance	Sensing type	Model
	40.5 × 60.5 mm	Typical reflectivity	Retroreflective	MS-2
		Typical reflectivity	Polarized retroreflective	MS-2A
		High reflectivity	Polarized retroreflective	MS-2S
	81.5 × 60.5 mm	Typical reflectivity	Retroreflective	MS-3
		High reflectivity	Polarized retroreflective	MS-3S
	29.3 × 38 mm	Typical reflectivity	Retroreflective	MS-4
	15.4 × 24 mm	Typical reflectivity	Retroreflective	MS-5
	13.7 × 23 mm	Typical reflectivity	Retroreflective	MS-6


- Material: PMMA / ABS (front part / rear part)
- Installation: Bolt mounting

■ Dimensions


MS-2□

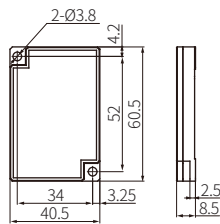


MS-3□

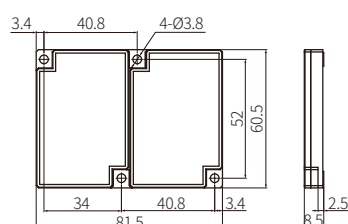


MS-4

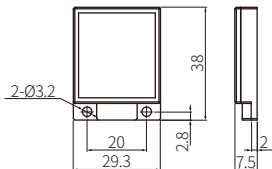

MS-5

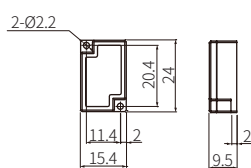

MS-6

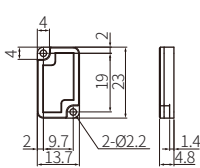

■ Cautions during Installation

- Select a reflector size that is suitable for the installation space and operating environment of the sensors.
- In general, a bigger size of the reflector results in a longer sensing distance.
- Reflectors with high reflectivity increase the sensing distance compared to typical reflectors.
- The reflectance may vary depending on the operating environment for the sensors.

Sold Separately: Retroreflective Tape MST Series


Appearance	Size (W × H)	Approval	Packaged unit	Sensing type	Model
	50 × 50 mm	ERC	10	• Retroreflective • Polarized retroreflective	MST-50-10
	100 × 100 mm	ERC	5	• Retroreflective • Polarized retroreflective	MST-100-5
	200 × 200 mm	ERC	2	• Retroreflective • Polarized retroreflective	MST-200-2

- Material: PMMA / PC / Acrylic (surface film / prism layer / adhesive layer)
- Ambient temperature: -35 to 65 °C (temperature for adhesion: 10 to 30 °C)
- Installation: Tape cutting (installation distance: ≥ 20 mm)

■ Reflectance of MST Series

Series	Sensing type	MST-50-10	MST-100-5	MST-200-2
BTS	Retroreflective	95%	100%	100%
BM		70%	110%	170%
BMS		90%	120%	190%
BEN		90%	130%	140%
BX		90%	100%	110%
BJ	Polarized retroreflective	40%	60%	100%
BJR		35%	45%	55%
BJX		35%	45%	55%
BH		60%	80%	140%
BEN		70%	90%	120%
BX		30%	40%	60%
BRQ		40%	50%	80%
BRQP (plastic material type)		40%	80%	85%
BRQPS (side sensing type)		25%	30%	35%

■ Dimensions


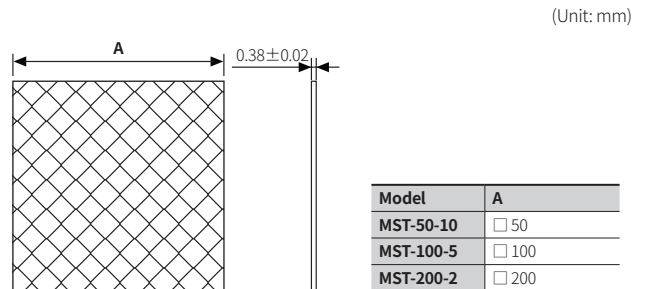


■ Cautions during Installation



- Select a retroreflective tape that is suitable for the installation space and operating environment of the sensors.
- In general, a bigger size of retroreflective tape results in a longer sensing distance.
- Be sure to check the reflectance of the MST series for proper use.
- The reflectance may vary depending on the operating environment for the sensors.
- Before applying the tape, clean the adhesive side of the reflective tape with a dry cloth.
- Do not press or damage the surface of the retroreflective tape.
- Regularly clean the tape to maintain optimal performance, using only neutral detergents. Do not use chemical solvents.

Characteristic Curves: Through-beam Type

■ Sensing area

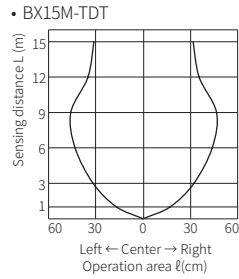



■ Emitter angle

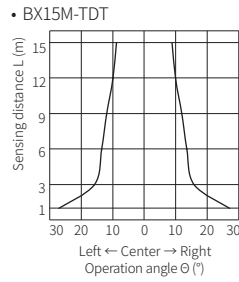
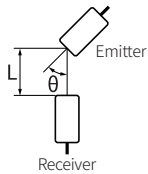


Characteristic Curves: Retroreflective Type



■ Sensing area

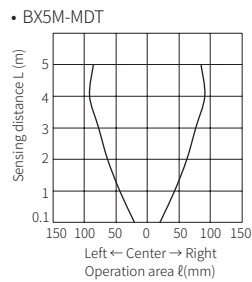

■ Sensor angle

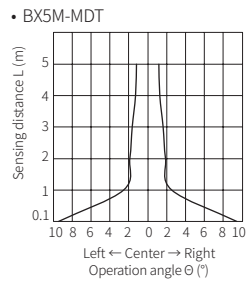



■ Reflector angle

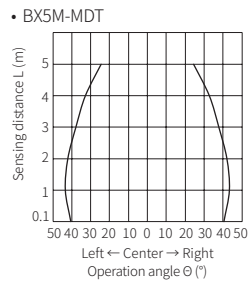



Characteristic Curves: Polarized Retroreflective Type



■ Sensing area

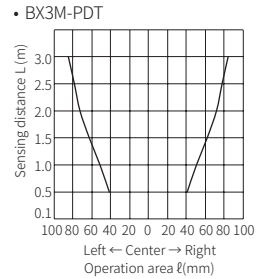

■ Sensor angle

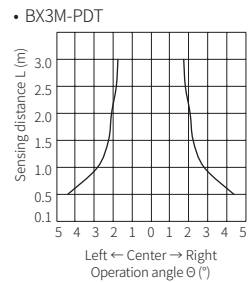

■ Reflector angle

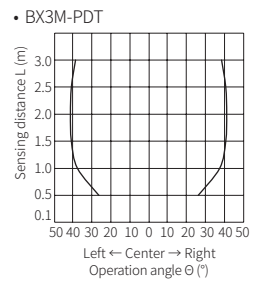

Characteristic Curves: Diffuse Reflective Type

■ Sensing area

